SCHEMATIC DIAGRAM=H & C Model

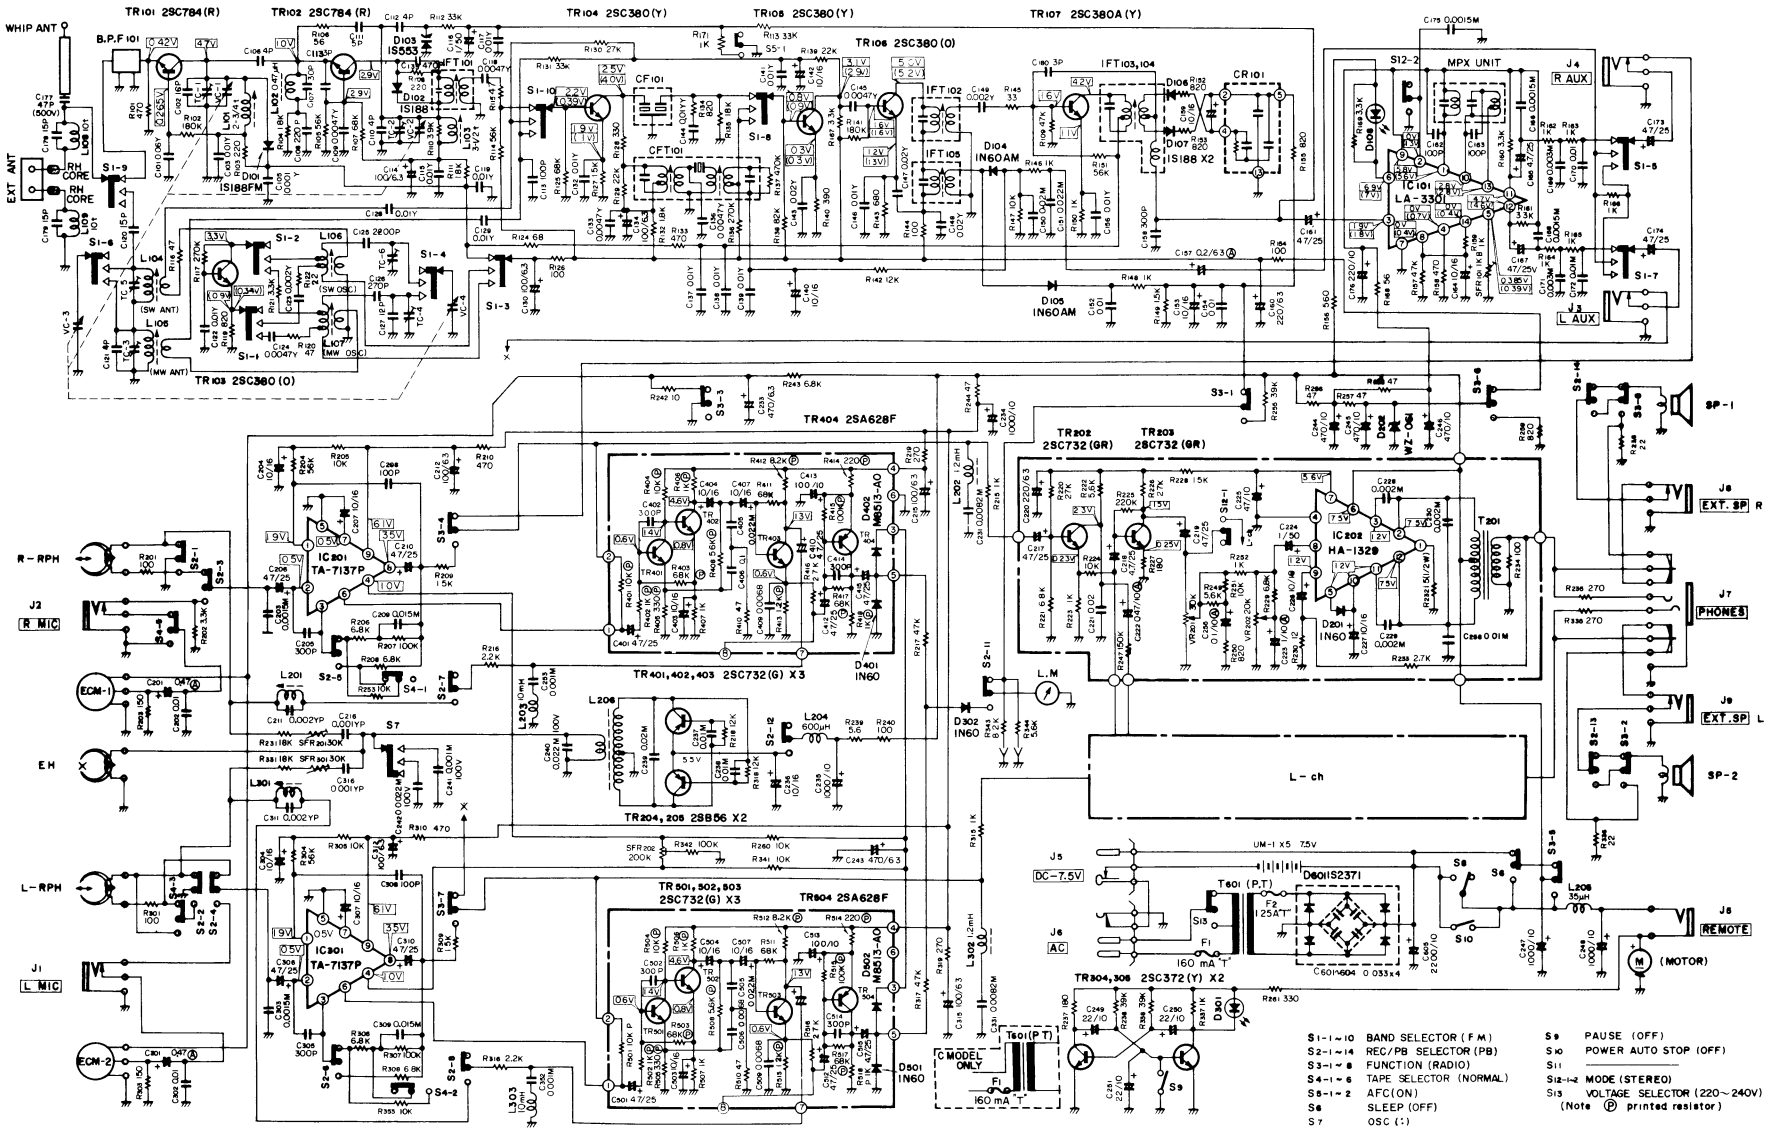

S1-1~10	BAND SELECTOR (FM)	S9	PAUSE (OFF)
S2-1~14	REC/PB SELECTOR (PB)	S10	POWER AUTO STOP (OFF)
S3-1~8	FUNCTION (RADIO)	S11	———
S4-1~6	TAPE SELECTOR (NORMAL)	S12-1~2	MODE (STEREO)
S5-1~2	AFC(ON)	S13	VOLTAGE SELECTOR (220~240V)
S6	SLEEP (OFF)		(Note Ⓟ printed resistor)
S7	OSC (:)		
S8	MAIN SW (OFF)		

Note: Subject to change without prior notice.

www.kn34pc.com